


MatManager™

Installation and Activation of
Mobile Data Transfer System

S-10130

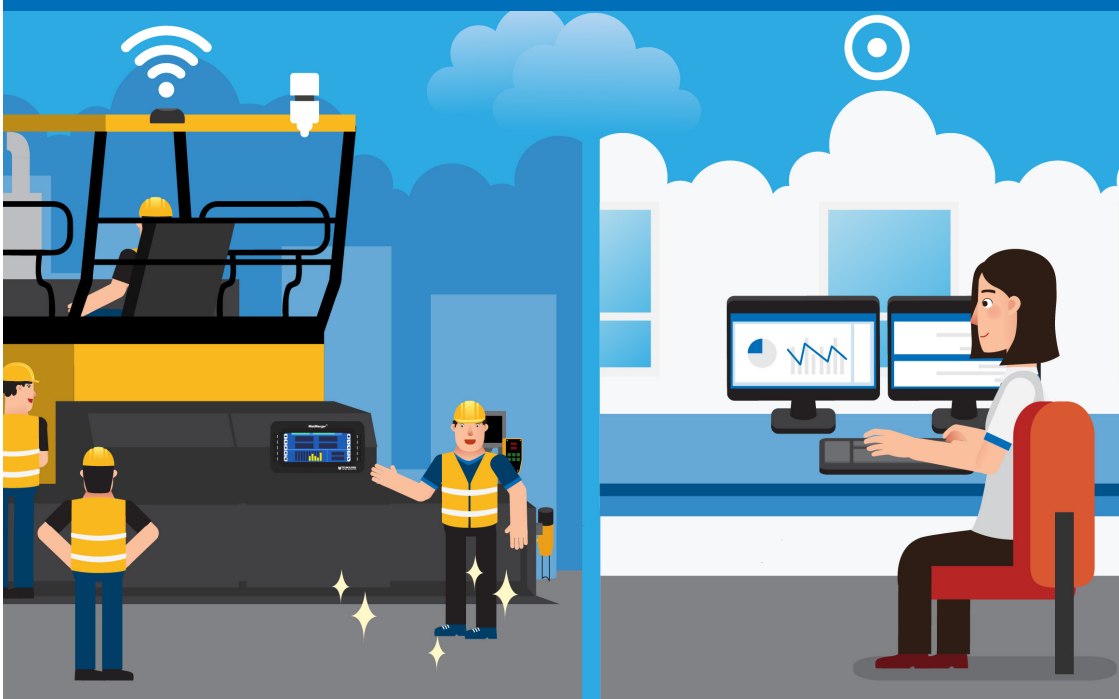

Installation Overview



Please note that connection of faulty cables may damage both the MatManager™ and the Mobile Data Transfer Module beyond repair. Warranty will be void in case of damages resulting from connection of unoriginal cables or original cables that have been tampered with

To enable data transfer to MatWiser™, "Mobile Data Transfer" must be activated on the MatManager™ Control Unit:

- 1 Press the Settings button to enter the Setting menu.
- 2 Press the right arrow 5 times, then enter the Calibration menu by entering the code 1210 and press "Access".

Then press the right arrow 9 times to get to the Mobile Data Transfer Setting menu.

- 3 Check the box "Enable Mobile Data Transfer".
- 4 Click the "Save" button. The system will reboot, press "OK".

To finish the setup, complete a test of the system after the reboot:

- 5 Press "Test" and the system will perform the test automatically.
- 6 After the test, all 4 squares must turn up green.

If any of the squares are red, make sure the antenna has connection (redo test outside). If problem persist, call your local sales office.





Kratbjerg 214 - DK 3480 Fredensborg - Denmark - Phone: +45 48 48 26 33 - Email: sales@tf-technologies.com
www.tf-technologies.com

Copyright All information, text and pictures are the intellectual property of, and copyrighted material of TF-Technologies A/S. **Disclaimer** Before MatManager™ is operated, the full user manual should be studied carefully to ensure correct and safe use of the system. TF-Technologies A/S and its distributors may not be held liable for potential editorial errors, omissions or failure effects. **Installation Guide Information** Document name: Installation and Activation of Mobile Data Transfer Module - Document number: G705603 - Publication date: 22. March 2022.