


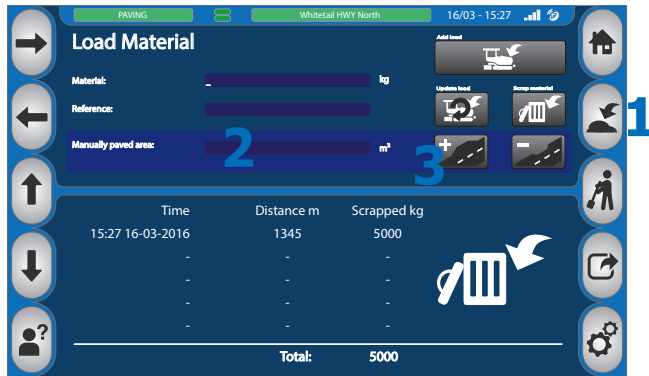

Add Manually paved area

- 1 Press the "Load" button to access the Load menu
- 2 Enter the area of the manually paved area you want to add
- 3 Press "+" to register the area



After adding the manually paved area, a list of manually paved areas will be displayed briefly on the bottom screen. The list can also be accessed by using the arrow buttons right and left, when in the "Load" menu.




The "+" button can be used to adjust the size of the area, if an area too large has been entered into the system



Export Data

- 1 Press the "Export" button to access the Export menu
 - 2 Press "Select Job ID" to unfold the list of jobs. Select the job you wish to export.
 - 3 Press "MatWiser" to automatically export an encrypted safe data report directly to MatWiser™, for analysis and documentation. (Only available if Mobile Data Transfer Module is installed.)
- OR
- 4 Press "USB" to export an encrypted safe data report that is stored on the USB stick and can be manually uploaded to MatWiser™ for analysis and reporting
- OR
- 5 Press "Receipt" to export a simple, predefined report file to the USB stick, that can be opened and printed from a pc.

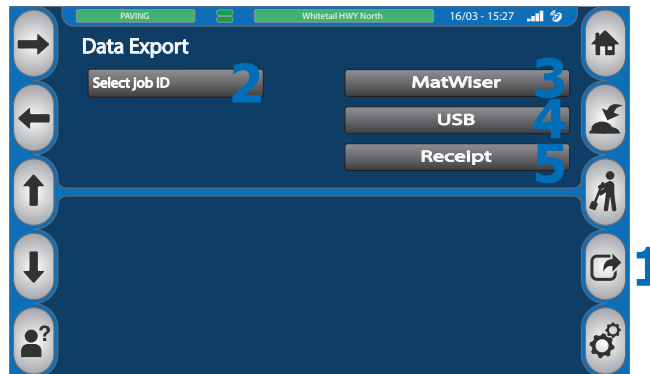

MatWiser™ is not available for MatManager™ Light System. If you wish to access this information, an upgrade is available. Please contact your local sales office

MatManager™

Quick Guide to Daily Operation



Start a new job

- 1** Press the "Job" button to access the Job menu
- 2** Enter information using the keyboard on the screen
Material ID, Paver ID, Crew & Density is optional
- 3** Press "Create new job" to create the new job

After creating a new job you will be taken to the Home screen and the job starts.
The new job is added to the list of jobs.



Delete job


It is not possible to delete the current job.
End the current job, to be able to delete it.

- 4** End current job
- 5** Delete job

Select a previously created job


- 1** Press the "Job" button to access the Job menu
- 2** Activate the dropdown menu by pressing "Select Job ID"
- 3** Select the job you wish to access, and press "Select existing job"

After selecting a previously created job you will be taken to the Home screen and the job starts.

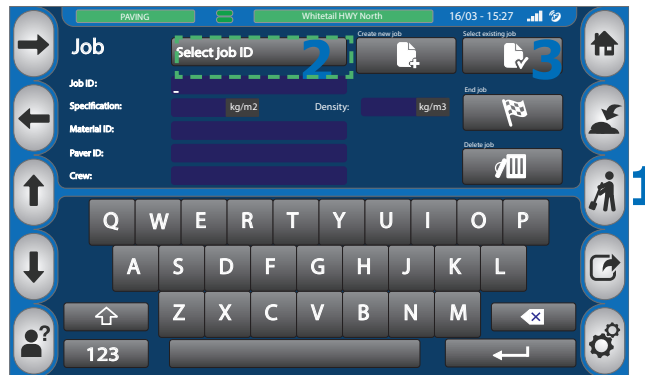

Enter load, modify load or scrap material

- 1** Press the "Load" button to access the Load menu
- 2** Enter load in kg using the keyboard on the screen
Reference code is optional
- 3** Press "Add load" to register the load **or**
- 4** Press "Update load" to modify the current load **or**
- 5** Press "Scrap material" to register that an amount of the material has been scrapped

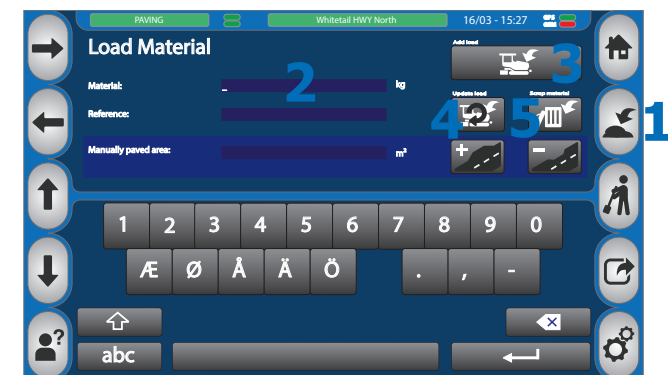

After registering or modifying a load, the load list will be displayed for 4 sec. and then return to the job.

After scrapping material, a list of scrapped material will be displayed briefly in the bottom view.

The list of loads can be accessed by using the arrow buttons right and left, when in the "Load" menu.